

Smoke Alarm

MAINS POWERED 230V~
9V Alkaline Battery Back-Up

Residents Guidelines for the **SAFE** use of Apartment Smoke Detectors

Operation

- The green indicator will illuminate to show mains power is present
- The red indicator will flash rapidly to show an alarm condition for the smoke detector
- The “Test/Hush” button will either silence false alarms or perform a unit self-test.
- In “Hush” mode the alarm enters a ten minute period of reduced sensitivity to overcome false alarm conditions, and will then automatically reset itself.
- When interconnected to other Ei mains powered alarms, an alarm on one detector will trigger all other interconnected alarms within one second (only the triggered alarm will flash a red indicator)
- The smoke detector will emit a beep every 40 seconds to indicate that the battery back-up is depleted and needs recharging. In this instance please replace the battery pack straight away.

If an alarm is to trigger and it is **NOT** an emergency please press and hold the **‘HUSH’** button until the alarms stops.

DO NOT REMOVE THE ALARM FROM ITS FIXED POSISTION.

Alarm models may vary from Apartment to Apartment, however they all should operate in a similar manner. Please ensure your Smoke Detector is in working order and you do know how to operate it.